




Cable Fault Locator

Weshine® invented the Cable Fault Locator with CE certificate, high quality and accuracy, Invented and produced according to national standards, complete electric testing solution available. Contact us for more details of Cable Fault Locator from Weshine!

What should you do when there are cable faults?



The steps to detect cable fault are as follows:

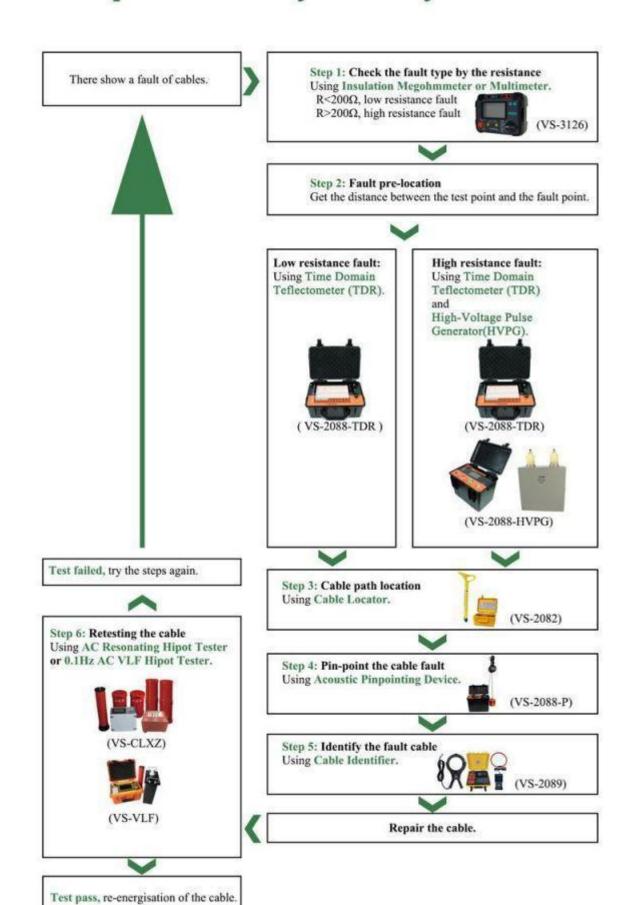



Most Weshine® cable fault you can't see it by eyes, so you need the location system of the cable fault. This is a multi-step process that needs to be done as safely and quickly as possible, as power is not available to the customer.

Step 1. Cable separation and security measures: Cable failure is almost always irreversible. This means that the cable in question has tripped a protective device at one or both ends of the cable and the cable is insulated and not grounded (ungrounded).

The first task is to secure the cables by qualified personnel. Before grounding, it is recommended to insulate one or both ends. Only by following the proper procedures can the tester approach the cable and prepare it for testing.

Step 2. Cable identification: If there are multiple cables, the cable identification test determines the correct cable to use. Clear identification of cables before cutting them is essential for safe maintenance work. Errors here can be fatal and lead to even longer disconnections of connected clients.

Step 3. Tracing the cable: When underground cables are first laid, they rarely run in a straight line, but curve in depth and direction. A cable trace is performed to ensure that the cable route follows the expected path.

Step 4. Fault Identification: The first important step is to identify the faulty phase and determine if it has a low or high resistance.

This test determines the correct methods and equipment for fault diagnosis. Typically, if the noise is less than 100 ohms, a low voltage pulse (eg 40 V) from a TDR (Time Domain Reflectometer) can be used. Faults are associated with higher resistance (> 100 ohms) and may not be detected with low voltage pulses. For such failures, a shock generator (shock discharge) is required.

Step 5. Preliminary determination of the location of damage: To locate cable faults quickly and effectively, you need a reliable and accurate pre-detection method (by Weshine® Cable Fault Locator). Early detection of serious faults can be localized within a few percent of the cable length, reducing isolation time to minutes.

Remember:

- a) For low resistivity faults, pre-localization was probably the only option.
- b) In case of high resistance short circuit, ARM (arc reflection) or ICE (pulse current) must be used with SWG (pulse wave generator). location in advance.


Step 6. Pinpoint: The test method described above allows the operator to be within 5% of the obstacle. To narrow error bars to 0.1%, the acoustic accuracy method



should be used. Most often, shock discharge generators are used for identification in combination with acoustic methods. The electrical discharge creates a loud noise that can be accurately identified using acoustic identification equipment. This device evaluates the time difference between the acoustic signal (speed of sound) of an impact and an electromagnetic (close to the speed of light) pulse. The exact location of the fault is determined by indicating the smallest time difference.

Step 7. Reconnect the cables: Upon completion of all tests and repairs, the safety/test documentation will be cancelled. The cables are then returned to the appropriate operators for repair and reconnection of the newly repaired cable loads.



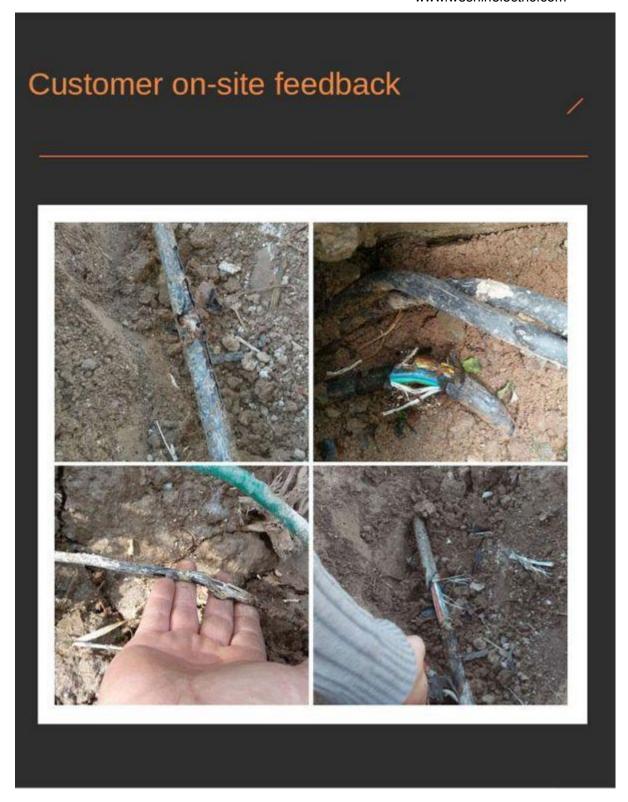

Product Introduction







Electrical networks had to become more flexible, respond quickly to changes and demand better performance. This need for flexibility is especially important when there are multiple sources of power generation, such as intermittent power from renewable sources such as solar and wind. Today his SMART grid technology can quickly identify faults in substations and generator sets, but cable faults can occur anywhere in the network. Finding cable faults quickly for repair is a top priority to avoid long recovery times (through Weshine® Cable Fault Locator could done easily). First of all, this affects reliability indicators, especially in the power industry. These metrics include the SAIDI (the System Average Interruption Duration Index), which measures the total duration of an average client interruption over a period of time, and the SAIFI (the System Average Interruption Frequency Index). It is calculated by




dividing the total number of clients. Interrupted by the total number of clients served.

Weshine® Cable Fault Locator Parameter (Specification)

PRODUCT INFORMATION					
Product Name	Split-type Cable Fault Locator				
Model Number	VS-2088	Certificates	CE; EMC; LVD;		
Measuring Distance	60 km	Blind Area	<1 m		
Measuring Method	Low-voltage pulse method, flash current method, multiple pulse method.				
Product Function	Locate cable faults below 35 kV.				
Typical Application	Power cable, street lamp cable, airport signal cable, railway communication control cable				



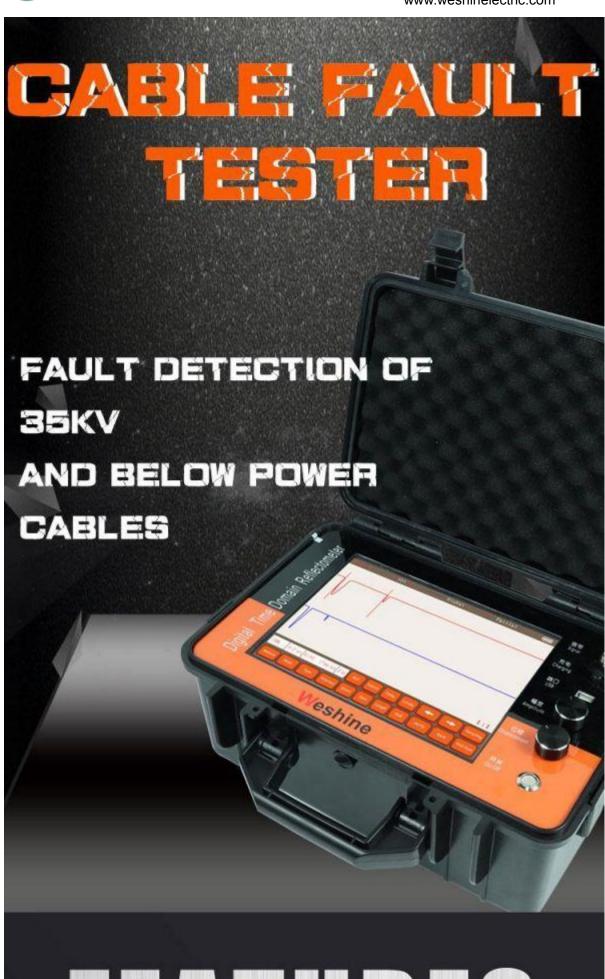

EEATHDEC





Low-voltage pulse method(TDR)

shock flash-over method(ICM)

speed measurement method(Speed)

Test distance:


< 60km, blind area ≤1m

10.4 "color touch LCD screen


PRODUCT INTRODUCTION





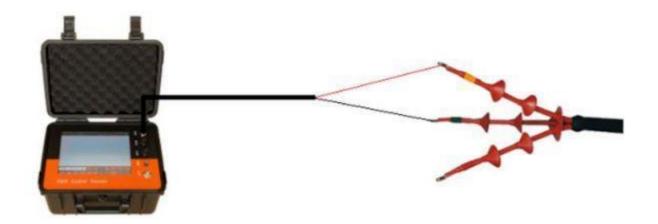

SHORT CIRCUIT FAULT DETERMINATION AND LOCATION

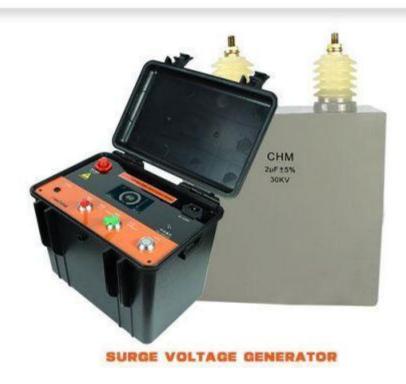


IMPACT FLASHOVER METHOD







- IMPACT ENERGY: 1024J
- OVERVOLTAGE AND OVERCURRENT PROTECTION

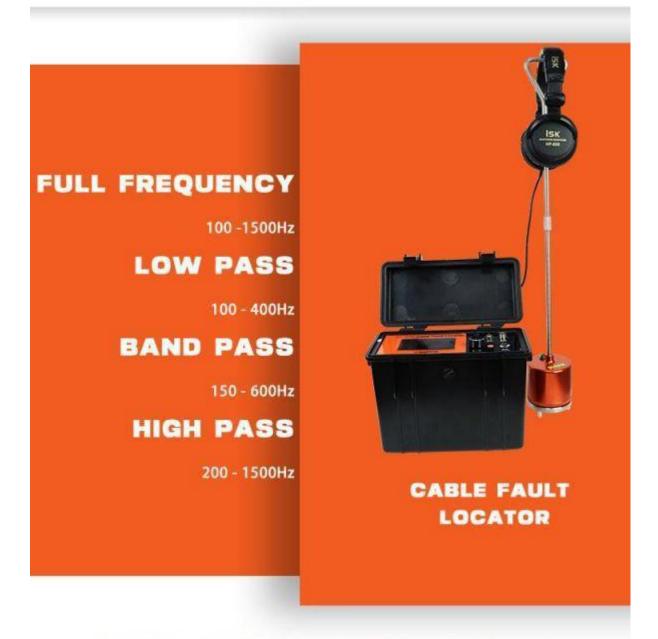







CABLE FAULT TESTER
L360MM × W270MM × H170MM



SURGE VOLTAGE GENERATOR
L370MM × W270MM × H330MM



2UF/30KV CAPACITOR L300MM × W269MM × H420MM



CABLE FAULT LOCATOR
L240MM × W100MM × H220MM



CABLE FAULT LOCATOR
L520MM × W280MM × H200MM





_	many agent ambanation.	- 1-
4	Cable Fault Locator	1 pc
5	Accessories	1 set



LIVE SHOW







THE STEPS TO DETECT CABLE FAULT ARE AS FOLLOWS:



THE STEPS TO DETECT CABLE FAULT ARE AS FOLLOWS:



CABLE IDENTIFICATION

Where multiple cables exist, cable identification testing will identify the correct cable to work on.

>>VS-2089 Cable Identifier



CABLE TRACING

Cable tracing is done to determine that the route of the cable is following the expected path.

>>VS-2082 Split-box Cable Path Locator



STEP Z



STEP 3

FAULT IDENTIFICATION

The first major procedure is to determine the phase on which the fault has occurred, and if it is of low or high resistance.

>>VS-3126 Insulation Resistance Tester or Multimeter

FAULT PRELOCATION

A reliable and precise pre-location method is necessary to locate a cable fault quickly and efficiently.

>>VS-2088 Cable Fault Location System





Generally, there are two kinds of cable faults:

1.low resistance (< 100 Ohms)

2.high resistance (> 100 Ohms)



LOW RESISTANCE(< 100 Ohms)

If it is a low resistance fault, pre-location was likely to be the only means necessary for location.

>>VS-2088-TDR Time Domain Reflectometer(TDR)



HIGH RESISTANCE(> 100 Ohms)

For high resistance faults, ARM (arc reflection) or ICE (impulse current) techniques on an SWG (surge wave generator) should be used. Alternatively, the decay method with an HV DC tester (bridge),



Selections

Weshine has 8 years of experience specifically for deal with complete range of Electrical Equipment. At present, Weshine has invented various **Cable Fault Locator** for each step as shown as form:

RELATED PRODUCT INFORMATION OF Cable Fault Locator			
Cat. No.	Product Name	Typical Application	
VS-2089	Cable Identifier	Where multiple cables exist, cable identification testing will identify the	
	Cable Identifier	correct cable to work on.	
VS-2082	Split-box Cable Path	Cable tracing is done to determine thatthe route of the cable is following the	
	Locator	expected path.	
VS-2088-TDR	Time Domain	If it is a low resistance fault, pre-location was likely to be the only means	
	Reflectometer(TDR)	necessary for location.	
VS-2088-HVPG	High-Voltage Pulse	For high resistance faults, ARM(arc reflection) or ICE(impulse current)	
		techniques on an SWG(surge wave generator) should be used.	
VS-2088-P	Acoustic Pinpointing	The discharge creates a loud noise, which is pinpointed precisely using an	
	Device	acoustic pinpointing device.	
VS-CLXZ	AC Resonating HiPot	It is especially suitable for the withstand voltage test of power cables.	
	Tester		
VS-VLF	0.1Hz AC VLF HIPOT	VLF testers are smaller and more practical than AC testers but output the	
	TESTER	same amount of power as a 50 Hz mains device.	

Based on Supply Chain issues: Please contact your preferred Authorized Weshine Distributor for current pricing and lead times. Weshine provides each customer with the most complete cable fault test solution.

Quality Certificates

We always believe that all the success of our company is directly related to the quality of the products we provide. **Cable Fault Locator** meet the highest quality requirements specified in ISO9001, ISO14000:14001 guidelines and our strict quality control system.





Shipment



For further information on Weshine's Service Solutions, contact our 24/7 online sales representative to get quotes from Weshine.

Contact us

FEEL FREE TO MAKE A PHONE CALL:400 996 1868	OR E-MAIL TO: info@weishengelectric.com	
SALES OFFICE	CONTACT OFFICE	
Weshine Limited 602, Building 3, Diangu	T. 0312 3188565	
Technology Center, No. 3088, Lekai North Street	E. bdweisheng@weishengelectric.com	

Weshine Electric Manufacturing Co., Ltd.
Address:Diangu Technology Center, No. 3088, Lekai North Street
Tel:+86-312-3188565 Phone:+86-18731260588
E-mail:sale09@weshinelectric.com



W/app: +86 1873 1260 588	
E. info@weishengelectric.com	AFTER-SALES SERVICE
sale01@weishengelectric.com	T. +86 157 1252 6062